USER MANUAL

PR SERIES POWERED SPEAKER SYSTEM

IMPORTANT SAFETY SYMBOLS





The symbol is used to indicate that some hazardous live terminals are involved within this apparatus, even under the normal operating conditions, which may be sufficient to constitute the risk of electric shock or



The symbol is used in the service documentation to indicate that specific component shall be replaced only by the component specified in that documentation for safety reasons.



Protective grounding terminal



Alternating current/voltage



Hazardous live terminal

ON: Denotes the apparatus is turned on

OFF: Denotes the apparatus is turned off.

WARNING: Describes precautions that should be observed to prevent the danger of injury or death to the operator.

CAUTION: Describes precautions that should be observed to prevent danger of the apparatus.

IMPORTANT SAFETY INSTRUCTIONS

Read these instructions.

Keep these instructions.

Heed all warning.

Follow all instructions

Water & Moisture

The apparatus should be protected from moisture and rain, can not used near water, for example: near bathtub, kitchen sink or a swimming pool, etc.

Heat

The apparatus should be located away from the heat source such as radiators, stoves or other appliances that produce heat.

Ventilation

Do not block areas of ventilation opening. Failure to do could result in fire. Always install accordance with the manufacturer's instructions.

Object and Liquid Entry

Objects do not fall into and liquids are not spilled into the inside of the apparatus for safety.

Power Cord and Plug

electrician for replacement.

Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, refer to

Power Supply

The apparatus should be connected to the power supply only of the type as marked on the apparatus or described in the manual. Failure to do could result in damage to the product and possibly the user.

Unplug this apparatus during lightning storms or when unused for long periods of time.

Fuse

To prevent the risk of fire and damaging the unit, please use only of the recommended fuse type as described in the manual. Before replacing the fuse, make sure the unit turned off and disconnected from the AC outlet

Electrical Connection

Improper electrical wiring may invalidate the product warranty.

Clean only with a dry cloth. Do not use any solvents such as benzol or alcohol.

Servicing 5


Do not implement any servicing other than those means described in the manual. Refer all servicing to qualified service personnel only.

Only use accessories/attachments or parts recommended by the manufacturer.

Please remember the high sound pressure do not only temporarily damage your sense of hearing, but can also cause permanent damage. Be careful to select a suitable volume.

O1F2:			

NIOTEO

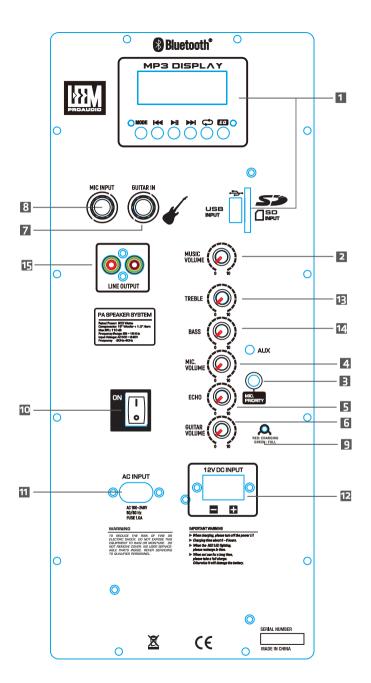

CONTROL PANEL

1. MP3 PLAYER

Insert USB or SD, Bluetooth, FM, Line in...

2. MASTER

The knob adjust the volume of the Mp3 Player.

3. MIC.PRIORITY

When you speaking by the Microphone, the system reduces the volume of the music. The audience can hear you clearly

4 MIC VOLUME

The knob adjust the volume of the Microphones, included the Wireless mic. and Wired microphone. Take the knob at midtim'turosé you the Microphone.

5. ECHO

The knob adjust the delay volume of the Microphones, included the Wireless mic. and Wired microphone.

Guitar LEVEI

The knob adjust the volume of the Guitar or another musical instruments.

7. Guitar INPUT

The socket for the Guitar or another musical instruments.

8. MIC. INPUT

The socket for the Microphone.

9. CHARGING OR BAT. FULL

When you charging the light is red, when the light is green, the battery is full

10. POWER SWITCH

Turn on turn off the power of the speaker

11. AC INPUT

When the battery is low, insert the power cord to recharge. (Please ture off the power and recharging)

12. DC 12V INPUT

When the battery is low, you can use the external 12V power supply. But do not to get the wrong polarity, red to the positive, black to the negative. If the connection wrong, will cause the amplifer to burn.

13. TREBLE

The knob adjust the treble of the speaker system

14. BASS

The knob adjust the bass of the speaker system

15. LINE OUTPUT


Two RCA connectors for OUTPUTS

IMPORTANT WARNING

- ► Cuando este cargando la bateria Apagar el equipo
- ► Tiempo de carga sufieciente de 6-8 horas
- ► Cuando la luz de bateria baja encienda ponga a recargar nuevamente
- Mantener cargando por mas del tiempo sugerido puede da

 nar la bateria

2. WIRING

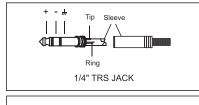



SPECIFICATIONS

Model Specifications	PR-12HR	PR-15HR	
Configuration	12" 2-way	15" 2-way	
Frequency Range (-10dB)	60~18000Hz	55~18000Hz	
MAX Power	50Watts	60Watts	
Nominal Impedance	4 Ohms	4 Ohms	
Sensitivity (1W@1m)	93 dB	95 dB	
Crossover Frequency	3.0KHz	3.0KHz	
Maximum SPL	101 dB	103 dB	
Input Connectors	XLR,JACK,RCA	XLR,JACK,RCA	
Dimensions $(H \times W \times D)$	615x410x330mm	715x485x395mm	
Net Weight	10Kgs	14.5Kgs	

When open the carton box, please check the parts as below:

SPEAKER x 1

POWER CORD x 1

WIRELESS MICROPHONE x 2

MANUAL x 1

PORTABLE HIGH POWER SPEAKER SYSTEM

Features:

Enclosure adopted a high impact polymer, injection molded shaping, It has high intensity and light weight, also with wheel and top handle. easy to carry it. But carry it carefully, don't drop it.

Woofer speaker make a high powered pro-speaker, It has wide range, low distortion, high senditivity, adopted a steel frame, It has non-mechanical resonance.

Driver selected a titanium diaphragm, and light mass voice coil, make it high frequency reached 20,000 Hz.

The new A.A.S.S.(Automatic amplitude servo system) processor ensures total protection of the trancducers and improvement of the acoustic response.